

# alte Tipps

## Jumperbelegung Longshine LCS 8634

JP1:	open (default)
	Close if you installed the LCS-8634 in a PC system with Suntac chipset
JP2:	Setting DMA channel
	5656
	+--+ DMA 5
	5656
	-+--+ DMA 6
	all open (default)
JP3:	Interrupt settings
JP4:	closed if Bootprom installed

SW1 : Setting Base Memory and BASE I/O Addresses

(\* = UP, - = DOWN)

Swiches Base Memory Address

12345

-----

*****	C000H
****_	C200H
***_*	C400H
**_--	C600H
**_**	C800H (default)
*_*_*	CA00H
**_--*	CC00H
*_*---	CE00H
*_***	D000H

... usw.

Die Liste ist binär geordnet, d.h. der Bereich ist bis F200H einstellbar und berechenbar.

Swiches Base I/O Setting

678

---

***	300H (default)
**_	320H
*_*	340H
*_--	360H

# alte Tipps

-\*\* 380H  
-\*- 3A0H  
--\* 3C0H  
--- 3E0H

Eindeutige ID: #26043

Verfasser: Andreas Geissler

Letzte Änderung: 2009-01-01 08:00